



Chirp-Edge Control System

Ensuring everything stays safe & protected!

There are two important aspects of the Control System - the Remote and the Remote Resetter. Every Chirp-Edge setup needs both items to ensure you can continue to keep your products protected and deactivate any Tags that are alarming.

The Remote

The Remote is a small plastic-moulded device that you point closely to each Tag and with a simple button press, you link it to your Chirp-Edge Hub.

If and when a tag is activated and starts to alarm, simply use this Remote to disarm the sound.



The Remote Resetter



The Remote Resetter is a small device that's necessary to reactivate each Remote.

At the end of each day of trading each of your Remotes will reset, requiring them to be synced with the Chirp-Edge Hub again.

This security measure safeguards against the loss or theft of any of your Remotes.

Security without barriers