



## The Control System

Ensuring everything stays safe & protected!

There are two important aspects of the Control System - the Remote and the Remote Resetter. Every Chirp setup needs both items to ensure you can continue to keep your products protected.

## The Remote

The remote is a small plastic-moulded device that you point at each Tag, and with a simple button press, you link it to your Chirp-Zone hub.

If and when a Tag is activated and starts alarming, simply bring the Tag back into the safe zone to stop the alarm - or use this Remote to deactivate..



## The Remote Resetter



The Remote Resetter is a small device that's necessary to reactivate each Remote.

At the end of each day of trading each of your Remotes will reset, requiring them to be synced with the Hub again.

This security measure safeguards against the loss or theft of any of your Remotes.

*Security without barriers*